



OWC Hard Drive Bracket for 2009-2012 Mac Pro®

DRIVE INSTALLATION INSTRUCTIONS

The OWC hard drive bracket for 2009-2012 Mac Pro has six mounting holes to allow for the alternate screw hole placement found on some higher-capacity hard drives. There are two possible screw configurations, each using four screws. Compare your drive with the following pictures to determine the correct screw placement.

Standard Configuration

Most hard drives will have this pattern, using the four holes at the rear of the bracket. The screws included with the bracket are installed by default in these holes.

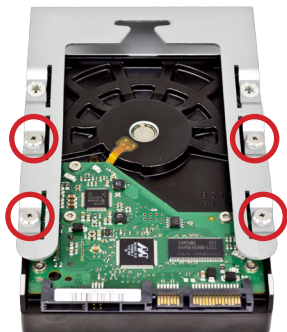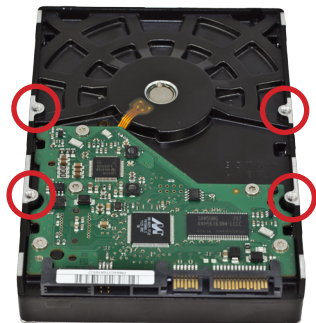

Alternate Configuration

If your hard drive uses this alternate screw pattern, you will need to move the two screws from the middle mounting holes to the mounting holes at the front of the bracket.

